


FORD F SERIES TRUCK EATC REMOVAL INSTRUCTIONS


REMOVAL

1. Disconnect the battery ground cable.

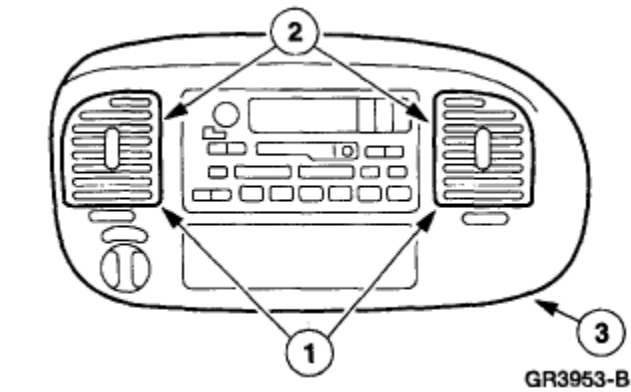


2. Detach the center instrument panel finish panel.


- 1 Rotate the center instrument panel finish panel vents inward.
- 2 Through the vent openings, grasp the center instrument panel finish panel and pull outward.
- 3 Detach the center instrument panel finish panel.

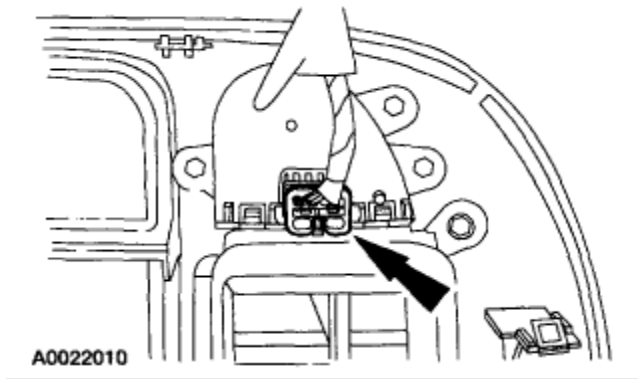


Disconnect the Passenger Air Bag Deactivation (PAD) switch electrical connector

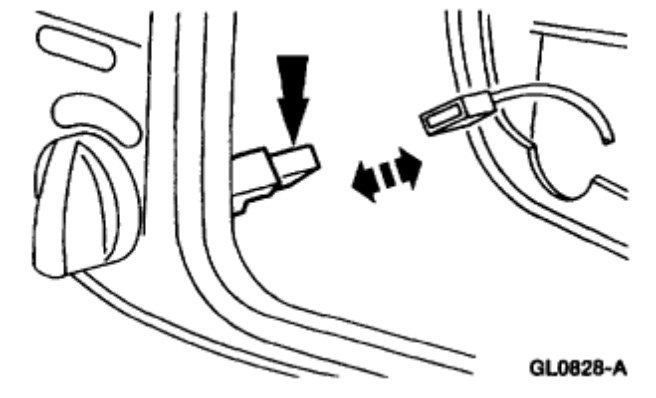

- 4. If equipped, disconnect the 4WD control switch connector. Remove the center instrument panel finish panel.**

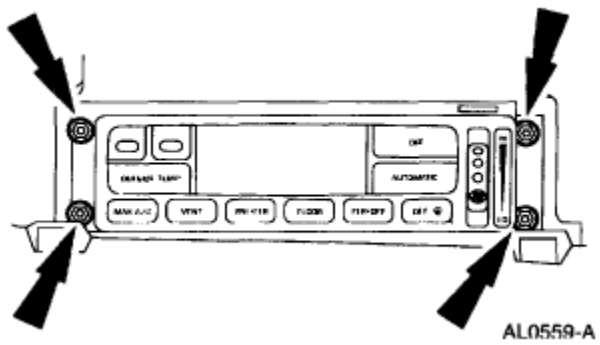

Remove the screws

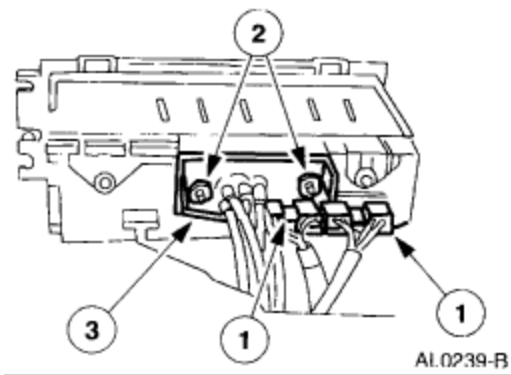

6. Remove the EATC module.

1 Disconnect the electrical connectors.

2 Remove the nuts.

- 3 Disconnect the vacuum harness connector and remove the EATC module.

INSTALLATION

1. To install, reverse the removal procedure.

ASI www.autoecu.com 1-866-983-6688